


DODGE PICKUP

NOTE: All surfaces should be clean and dry before attaching brackets.

1. Place wheels in straight forward position.
2. Place stabilizer racket "A" inside frame as shown. Install bolt through bracket and hole in frame. Secure with flat washer, lock washer and nut provided.
3. Attach stabilizer rod to bracket "A" using bushing stack-up instructions printed on bag.
4. Attach stabilizer bracket "B" to stabilizer as shown using bushing stack-up instructions printed on bag.
5. Extend stabilizer piston rod 4 inches and place bracket "B" against front face of relay rod. Secure with u-bolts and nuts.
6. Turn wheels to extreme left and right making sure that wheel stops are contacted. Ascertain that no interference with oil pan, frame member, etc. occurs.
7. Be certain that all nuts are properly tightened before releasing installation.

BOX CONTENTS – See other sheet (Form No. 82031).

CAUTION: Any and all warranties including but not limited to any express warranties, implied warranty of merchantability, or implied warranty of fitness for a particular purpose shall not apply to any product altered in any way outside the premises of the manufacturer or to any product which is not installed in accordance with the written instructions provided by the manufacturer for installation of the product.

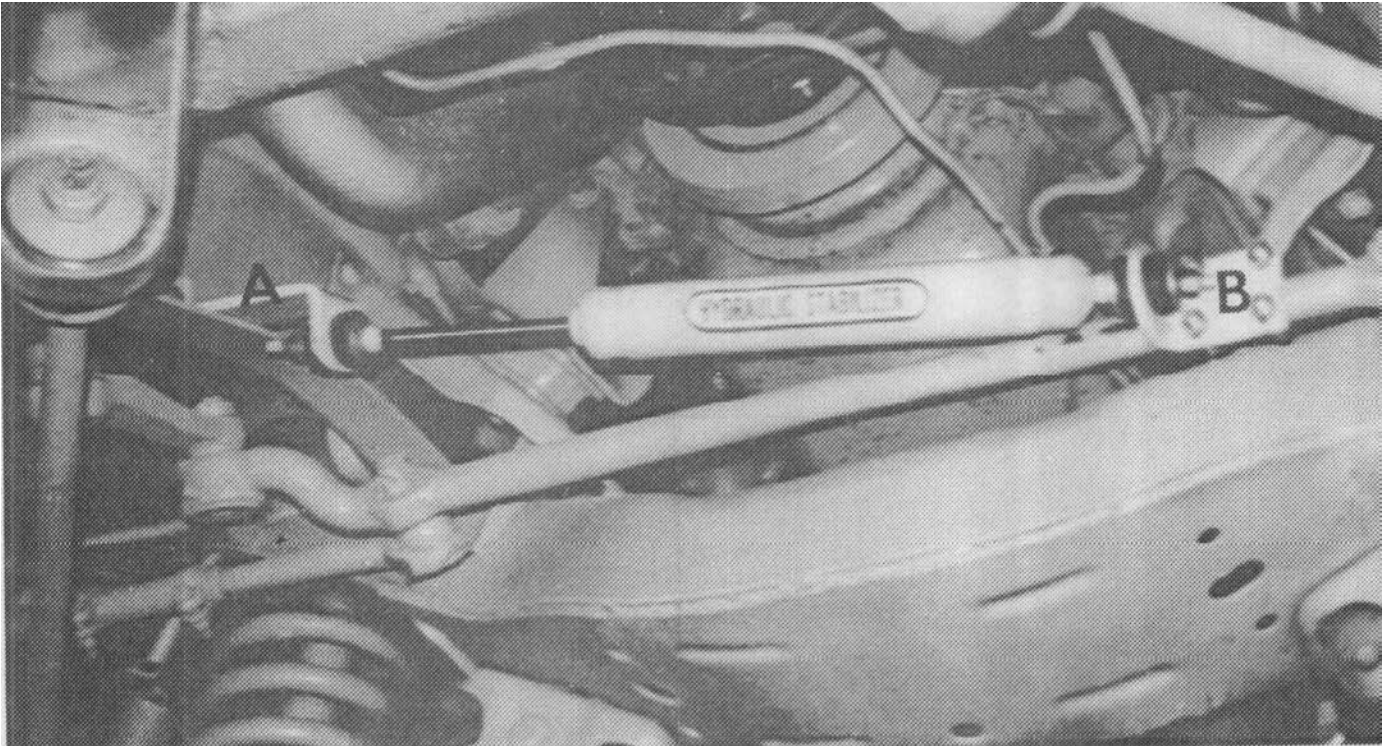

DODGE PICKUP (FURGONETA)

NOTA: Todos los lugares deben de estar limpios y secos, antes de conectar abrazaderas.

8. Ponga las ruedas en posición, derecha al frente.
9. Ponga la abrazadera "A" del estabilizador, adentro de la estructura (como se mira). Instale el tornillo a través de la abrazadera y el agujero en la estructura, asegúrelo con la rondana plana, la rondana de candado y su tuerca que se provee.
10. Conecte la varilla del estabilizador a la abrazadera "A", usando los empaques de hule que vienen en la bolsa de instrucciones.
11. Conecte la abrazadera "B" del estabilizador a el estabilizador (como se mira) usando los empaques de hule que vienen en la bolsa de instrucciones.
12. Extienda la varilla del pistón en el estabilizador 4 pulgadas y ponga la abrazadera "B" contra la cara del frente de la varilla de relevo. Y asegúrela bien con los tornillos en forma de "U" y sus tuercas.
13. Mueva las ruedas todo al extremo izquierdo y derecho para estar seguro que los altos de las ruedas hagan buen contacto. Asegúrese que no el miembro de la estructura u otra cosa.
14. Este seguro que todas la tuercas y tuercas con rondanas esten propiamente apretadas antes de entregar la instalación.

CAJA DE CONTENIDO – Mire la otra hoja. (Forma 82031).

PRECAUCION: Cualquiera y todas las garantías que se incluyen pero no limitada a cualquier garantía escrita, la garantía implícita de mercancía, o la garantía implícita de aptitud para un propósito particular no aplicará a cualquier producto alterado de forma alguna fuera de las promesas del fabricante o a cualquier producto que no se instala de acuerdo con las instrucciones escritas hechas por el fabricante de la instalación del producto.